

AGA Sunshade Slider Kit



Part # AGA-6061-SSK \$119.00

Problem:

The T-sliders are made of plastic and easily break. The T-sliders are not sold separately from BMW and it is costly to replace the entire sunshade.

Solution:

All German Auto has created a stronger T-slider made of 6061 aluminum so that it will never break.

Benefit:

A potential \$1100 to \$1500 replacement of the sunshade would now be a repair job at a fraction of the cost. The T-sliders will last longer and are sold separately.

Cost:

This complete kit is \$119.00

The kit includes 2 T-sliders and 2 rivet sets



All German Auto - Your Dealership Alternative

1327 Simpson Way, Escondido CA 92029 760.738.4626 Fax # 760.738.8013 www.AllGermanAuto.com

Installation Instructions:



1. Get sunshade in extended position. Take care not to rip the peripheral shade material. It is not necessary to remove sunshade assembly from car. New sliders can easily be installed in car. Pictures taken for instructions are taken out of car for demonstration purposes only.



2. Remove rail end cap by removing small Phillips screen holding end cap in place. Remove any broken parts from the old plastic T-slider. Observe direction of the long side on your model car since direction varies with model.




3. Grind out rivet from interior side. Start in center of rivet by grinding through dome of rivet. Go slow and take care **NOT** to generate heat that can melt the plastic on the sunshade arm. Remove rivet with small pliers. Make sure to **NOT** damage the end of the arm.



Note: On E38 and a few other models, rivet is installed from the other side and grinding the part is much easier. The long side of the slider goes towards the inside of the car on E38 models.



Installation Instructions continued:

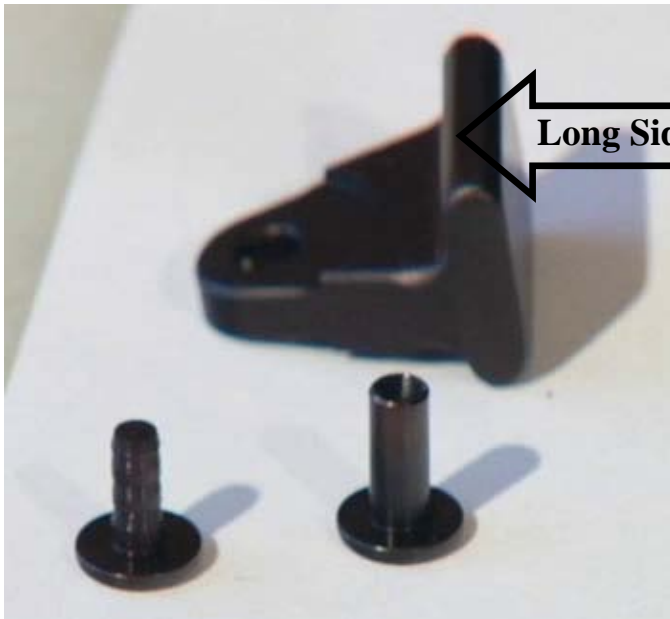

4. Install new slider with long side facing correctly according to your model. Slide new slider into groove of arm. (On E39, long side is towards rear window glass)

5. Fit female rivet into hole. Place male part of rivet in and push together with pliers. Rivet is barbed so it goes in easy and will not come out. DO NOT use excessive force. Make sure track is clean, lube if necessary. Insert slider into groove and install cap.

For Questions Call +1.760.738.4626



All German Auto - Your Dealership Alternative

1327 Simpson Way, Escondido CA 92029 760.738.4626 Fax # 760.738.8013 www.AllGermanAuto.com